


ColorTAC™ CVA-14

Quick Start Guide




Batteries:

- The CVA-14 takes 2 AA Lithium batteries. Insert (+) positive end first.
- A red light in the eyepiece flashes every four seconds when the battery life is reduced to approximately 1 hour.
- Disable flashing with a single press of Power Switch.
- **Warning: Never mix new and old Lithium batteries together. Choose batteries that meet intrinsically safe standards.**

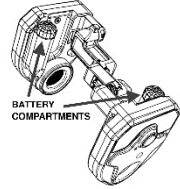


Power Switch:

- **ON:** Depress Power Switch for .5 seconds. Lights in eyepiece and beside Switch will flash.
- **OFF:** Depress Power Switch for 1.5 seconds. Lights in eyepiece and beside Switch will flash.



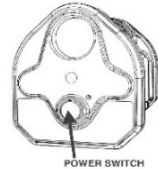


Unfolding/Folding the CVA-14:

- **Unfold:** Grasp the 2 filter housings and pull until the center linkage is flat.
- **Fold:** Lift the Center Spine and press both housings together.

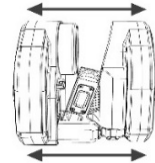

Mounting/Demounting the CVA-14 to the PVS-14:

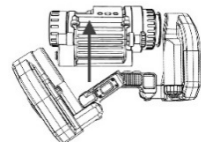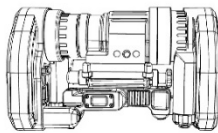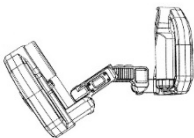


- Press PVS-14's eyepiece into receptacle and swing Front Housing up to capture the objective lens and the Center Spine locks flat. Rotate PVS-14's battery compartment until it's snug against rubber pads on top of Center Spine.
- Detach CVA-14 from PVS-14 by rotating PVS-14 so battery housing disengages from CVA's rubber pads on Center Spine. Press and hold Unlock Button, on side of the Center Spine, as you pull up on Center Spine and rotate Front Housing forward. This allows you to disengage and remove the PVS-14 from the CVA-14.

Switching from Color to Monochrome Mode:

- Switch from Color Mode to standard night vision by rapidly pressing Power Switch 2 times.
- Return to Color Mode by rapidly pressing Power Switch 2 times

Engaging the Color Enhancer:

- To engage the Color Enhancer, rotate the lever counterclockwise to improve the saturation of colors in the image. In normal and/or darker conditions, rotate the Color Enhancer Lever clockwise.

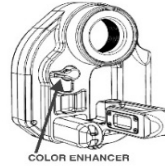

Warranty:

- The CVA-14 is covered by a (1) year limited warranty. For full warranty details, visit: www.colortacnightvision.com/warranty.

Precautions:

- Like the PVS-14, the CVA-14 is a precision electro-optical instrument and must be handled carefully. Do not scratch the external optical window surfaces or touch them with your fingers as this will degrade image quality. Before cleaning, carefully blow off dust and grit. Use lens tissue or a microfiber cloth to clean the windows. Detailed cleaning instructions can be found in the CVA-14 Manual.

ITAR Notice:

- This Quick Start Guide contains technical data whose export is governed by the U.S. International Traffic in Arms Regulations (ITAR). This information must not be transferred to a foreign person without the proper authorization of the U.S. Government. Export of the commodities described herein is strictly prohibited without a valid export license issued by the U.S. Department of State Office of Defense Trade Controls prescribed in the International Traffic in Arms Regulation (ITAR), Title 22 Code of Federal Regulation, Parts 120-130.

- Chromatra LLC

100 Cummings Center, Suite 231G

Beverly, MA 01915 USA

www.colortacnightvision.com

978.473.7005

© 2017 Chromatra LLC

Protected by:

US Patents 6,614,606 B2 and

US 7507964 B2 foreign patents

and patents pending.